 
 


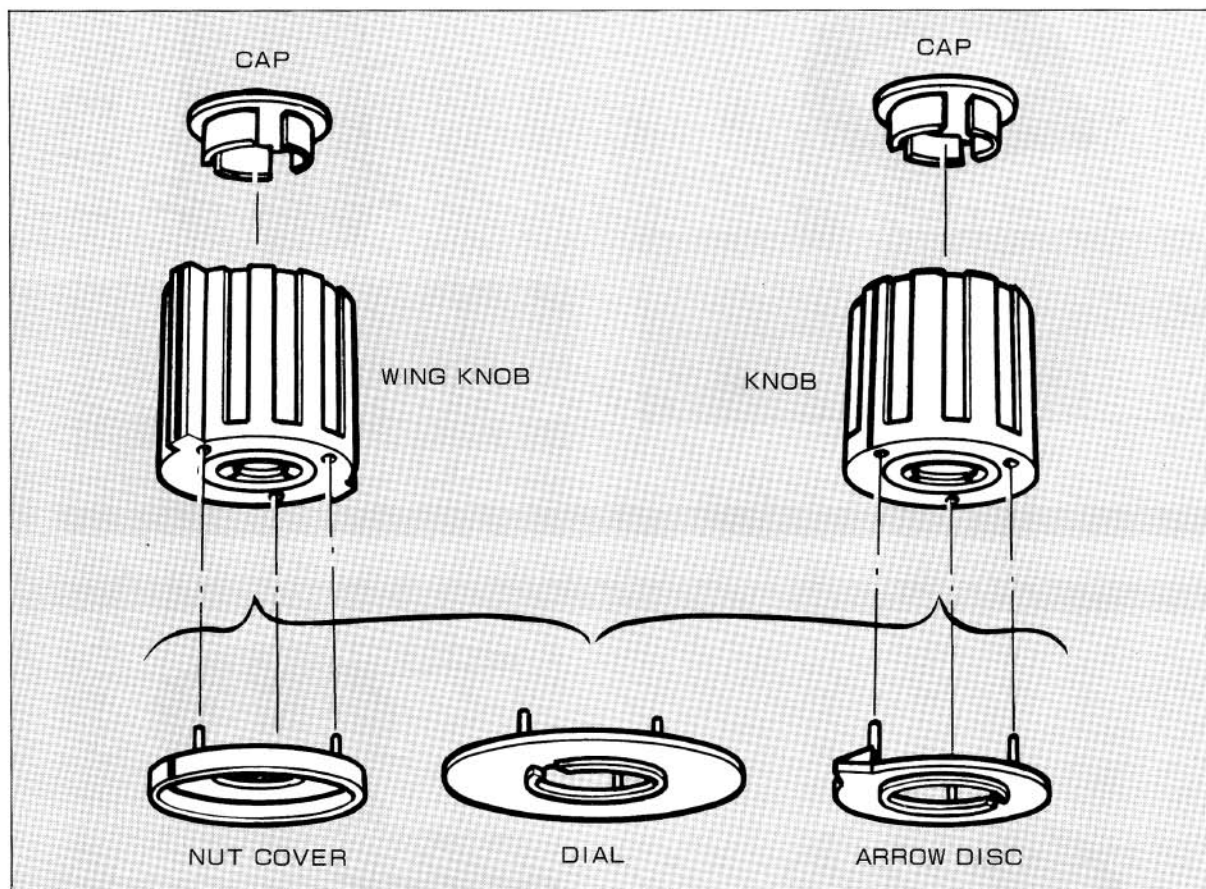


〈本 体〉

■KNOB

(1個/1組)

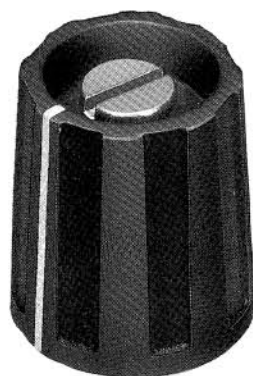

 コンプレックス

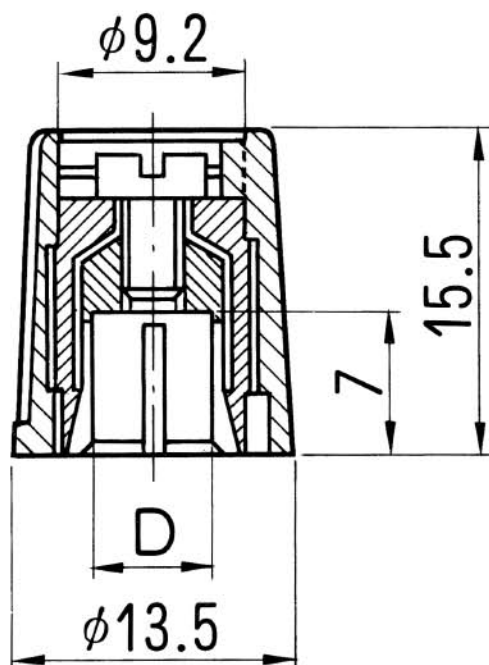

Color	D		
Black	4	OKW-25 13 04 0	OKW-26 13 04 0
	6	OKW-25 13 06 0	OKW-26 13 06 0
Grey	4	OKW-25 13 04 8	OKW-26 13 04 8
	6	OKW-25 13 06 8	OKW-26 13 06 8

コンビネーションノブ COMBINATION KNOB

 
 
OKW

は標準在庫品ではありません

〈本体〉φ13 SERIES

■WING KNOB

(1個/1組)

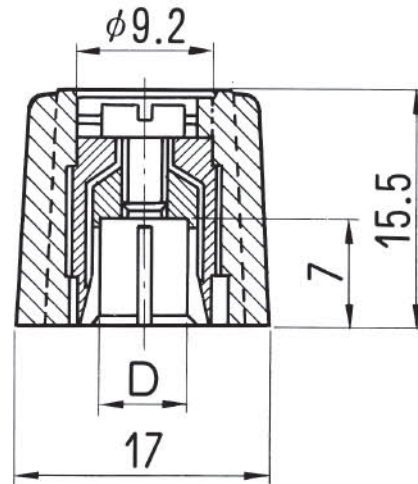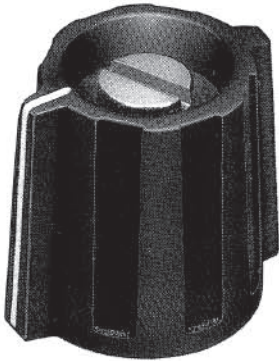


Color	D		
Black	4	OKW-27 13 04 0	OKW-28 13 04 0
	6	OKW-27 13 06 0	OKW-28 13 06 0
Grey	4	—	OKW-28 13 04 8
	6	OKW-27 13 06 8	OKW-28 13 06 8

〈アクセサリ〉

■CAP


 
(1個/1組)

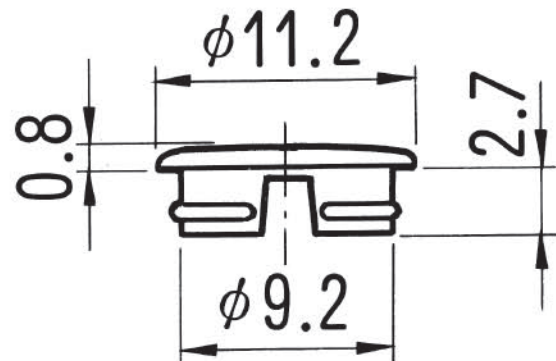

Color		
Black	OKW-41 13 00 0	OKW-41 13 10 0
Red	OKW-41 13 00 2	OKW-41 13 10 2
Yellow	OKW-41 13 00 4	OKW-41 13 10 4
Green	OKW-41 13 00 5	OKW-41 13 10 5
Blue	OKW-41 13 00 6	OKW-41 13 10 6
Light Grey	OKW-41 13 00 7	OKW-41 13 10 7
Grey	OKW-41 13 00 8	OKW-41 13 10 8

■NUT COVER

  (1個/1組)

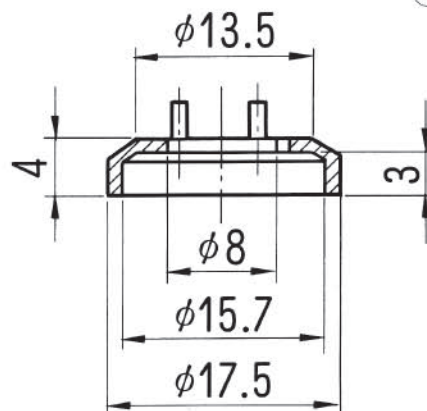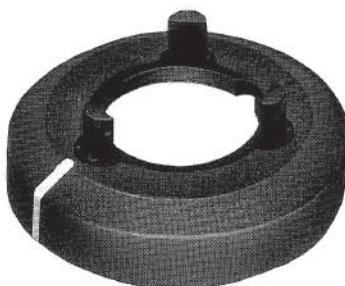


Color		
Black	OKW-75 13 00 0	OKW-75 13 01 0
Grey	OKW-75 13 00 8	OKW-75 13 01 8

コンビネーションノブ

φ13 SERIES 〈アクセサリ〉

■ARROW DISC bright


 
1個/1組

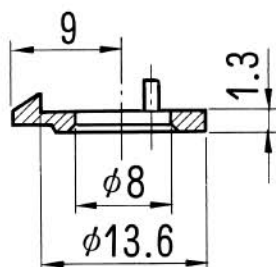

Color	
Black	OKW-42 13 00 0
Red	OKW-42 13 00 2
Grey	OKW-42 13 00 8

■DISC

 
 
1個/1組

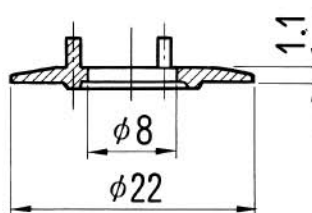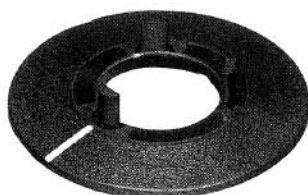

Color		
Black	OKW-73 13 00 0	OKW-73 13 01 0
Grey	OKW-73 13 00 8	OKW-73 13 01 8

■DIAL bright

  1個/1組

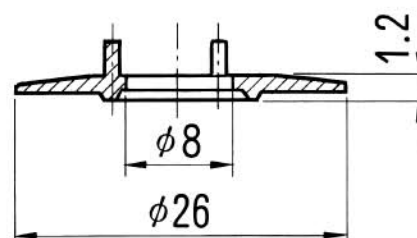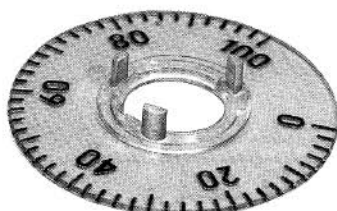


Color	
透明	OKW-44 13 00 1

	Symbols Black	OKW-44 13 01 0
	Symbols Black	OKW-44-13 02 0
	Symbols Silver	OKW-44 13 03 9
	Symbols Silver	OKW-44 13 04 9
	Symbols Black	OKW-44 13 06 0

■STATOR

 1個/1組

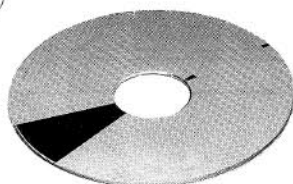

	OKW-60 13 01 9
	OKW-60 13 09 9

Aluminium-sheet with adhesive foil

